


Connect Meter as below:
One live line connect to 1, 4 & 7.
Choose any one of the 3, 6 or 9 as output.
Neutral line connect to 10 and load input to 11.

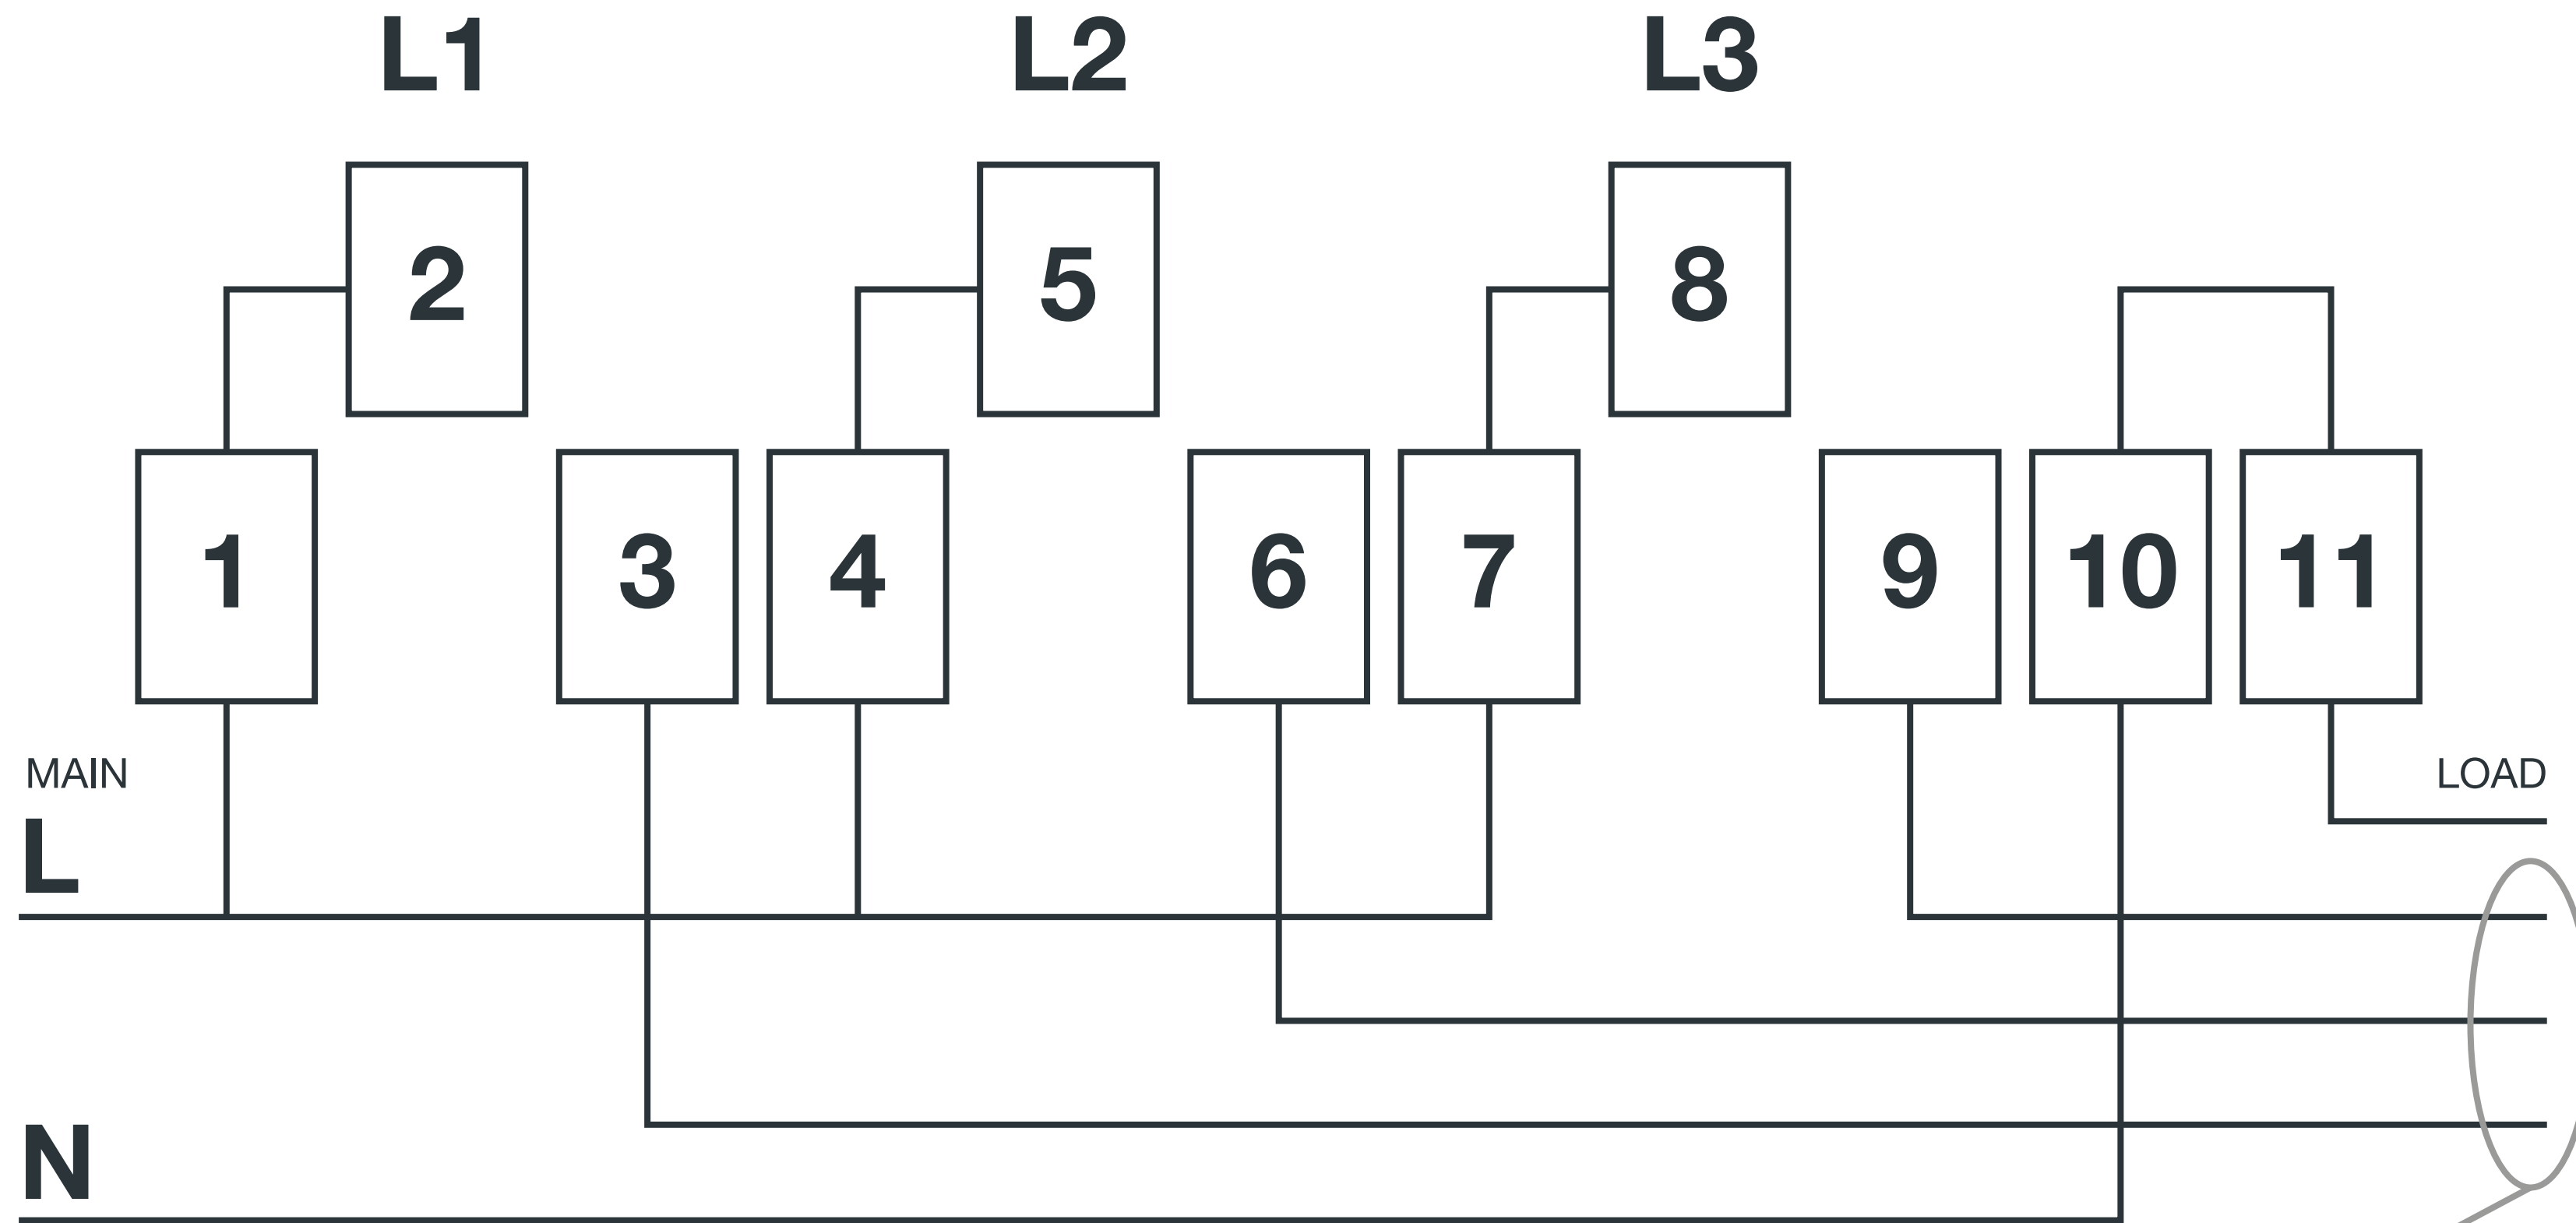

User can choose any one of the phase here to supply electricity